




## MP ROTATOR™

**RADIUS ADJUSTMENT SCREW**

**LEFT EDGE INDICATOR**

Spray arc is clockwise from this mark

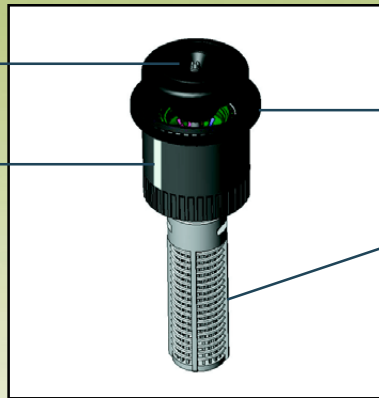

**ARC ADJUSTMENT RING**

**INLET SCREEN**

FOR CLEANING: snap off, flush with water, and snap back in place. CAUTION: Do not run the MPR without an inlet screen!

## OPERATING & ADJUSTMENT INSTRUCTIONS

### 1. EASY ARC ADJUSTMENT

- Factory setting is for minimum arc on all models. (Full-circle model does not have an arc adjustment.)
- Install the MP Rotator with the "Left Edge Indicator" pointing to left side of the desired watering area.
- Turn the water on.
- With the MP Rotator in the pop-up position, rotate arc adjustment ring (as seen in photo to right)



clockwise to increase the arc



counterclockwise to decrease arc

### 2. RADIUS ADJUSTMENT

- Factory setting is for full radius
- With a small flat-bladed screwdriver rotate screw:



clockwise to decrease radius



counterclockwise to increase radius



**ARC ADJUSTMENT**

**NOTE:** Rotating the arc adjustment ring in the pop-down position (or when the water is off) will not change the setting.



**RADIUS ADJUSTMENT**

The radius can be reduced by approximately 25% of full radius.



**Walla Walla  
Sprinkler Company**

A subsidiary of Nelson Irrigation Corporation

**Walla Walla Sprinkler Company**

848 Airport Road, Walla Walla, WA 99362-2271, U.S.A.

Tel: 509.525.7660 Fax: 509.525.7907 E-mail: info@mprotator.com

**www.mprotator.com**